

#1 The Main Loop

○ If the Base Floor isn't slotted, trace the Mid Floor Slot onto the Base Floor and cut the slot. Slot the top of the Foundation. [See the Slideshows.](#)

The Main Loop is pulled from the foundation up the sidewalls through the slots. It is easiest to run the tapewire during construction, one floor at-a-time, all in one piece without splices or connections. Wait to [stick it down](#) until the outside of the house is done, but before installing the Rear Roof or Dividers.


This wiring layout is without the [Customization Pack](#) so there is no Attic Ceiling or Attic Kneewall. In this case, the tapewire run across the Front Roof must be $1\frac{3}{8}$ below the top of the roof if it is to be accessible once the Rear Roof is attached.

○ Green Circles show re-directs where the wire is pleated to make a corner.



With the blunt back of a knife or a paperclip lift a pleat of material so the tapewire can proceed in a new direction. Press down the pleat into the corner.

Do not eyelet pleated corners!

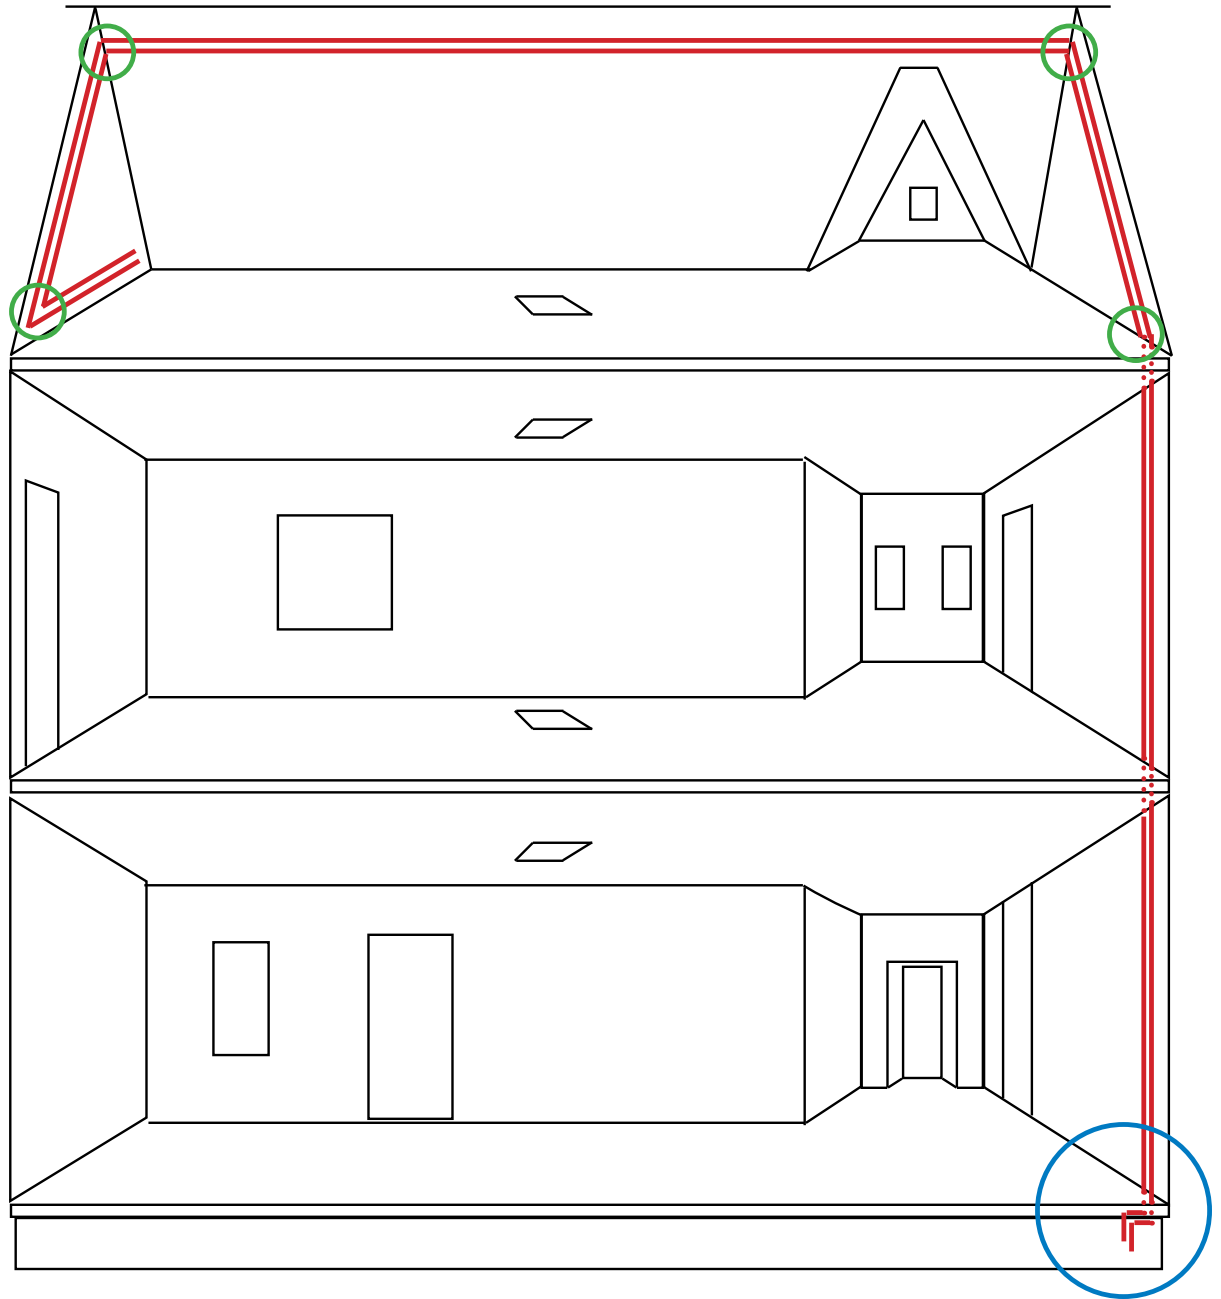

Next: #2 Ceiling Loops