


If you have already installed your dividers this style of ceiling wiring will work too. In this case, wait to install ceiling tapewire until the Base Runs are done. Note that the ends of the ceiling runs fully overlap the base runs. The ceiling tapewire overlaps the Main Loop at least 1 1/2" and is copper-over-copper and blue-over-blue!

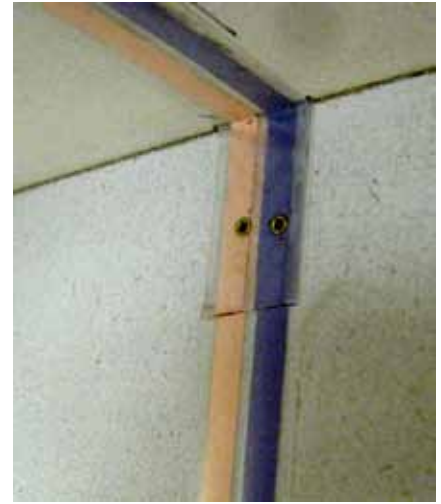

**copper-to-copper and blue-to-blue**

