


#JM 1602 Components for the Foxcroft Estate: Door, Windows, Shutters

Door, Windows, and Shutters are an option for the JM1602, and are packed separately from the kit

JM 1602 Component set contains:

- 1 6002 Door: 4 1/4 x 8 1/2, Oval light
- 9 3655W Window Exterior Frame 5 5/8 x 3 7/16, Mullions
- 9 E8049/50 Window Interior Frame 5 7/16 x 3 1/16
- 9 E8059 Window Pane (paper covered) 5 1/8 x 2 1/16
- 18 3655S Louvered Shutter 4 15/16 x 1 3/16
- 18 E8044 Shutter's Louver Stick: 1/16 x 1/16 x 2 1/4
- 18 E8043 Shutter Support: 1/8 x 3/8 x 1 1/4

Paint the Windows, Door, and Shutters with high-quality interior semi-gloss latex paint. Sand thoroughly after the first coat, until the paint is soft feeling, transparent, and some of the wood is showing. The quality of the final product is dependent on the quality of the sanding after the first coat.

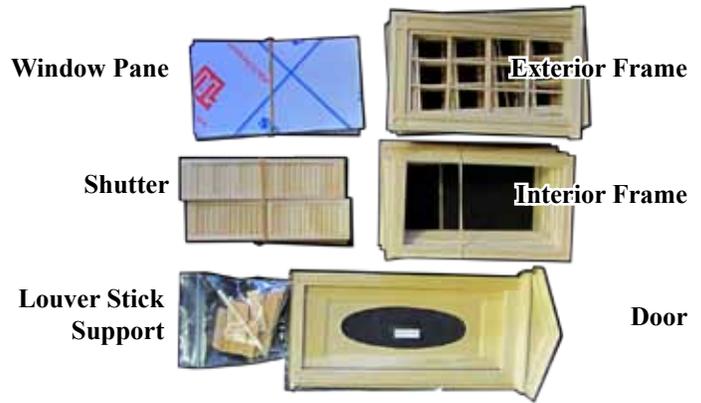

1. Disassemble the Door for painting:
Remove and discard the taped-on Packer (un-used).
 - A. Pull the bottom pin. Tip the door out of the frame, bottom-first.
 - B. Remove the top pin (tape the pins somewhere safe so they don't get lost... a cut-off piece of paper clip can substitute for a lost pin).
 - C. Remove the Door-Top panel - slide the Pane upward. Store the pane in a plastic bag until re-assembly. Put the Door-Top panel back in place while painting, but remove it and clean it after each coat.



2. Paint or stain the door (penetrating stain is a *much easier* option!). Do not paint in the groove and keep the paint on the inside of the oval panel to a minimum (Fragile! Only sand this surface with the top panel in place and even then be as gentle as possible). Remove the Top Panel and clean the joint immediately after every coat. Mop out the groove with a piece of card-stock or light chipboard.

3. Reassemble the door when painting is done. Put in the top pin, tip the door into position inserting the top pin in the hole in the top of the door, tip the door back into the frame, and feel with the bottom pin until you find the bottom hole. Tape the bottom pin to the bottom of the Door Frame to keep the pin from falling out.

4. To make interior work easier (especially wallpapering), wait to install the windows until interior work is done.

- A. Test the Window Pane in the cutout and square the corners as necessary for a loose fit.

- B. Glue in the Exterior Frame, straight and square.



- C. Glue a Shutter Support next to the Window if you intend to lay the edge of the Shutter on the face of the Frame... otherwise you may discard the Support.

- D. Install the Louver Stick before the last coat of paint.

- E. The Pane (take off the paper) sets into the window cutout and is held there by the Interior Frame. Do not glue the Pane into the opening or to either Frame. Install Interior Frames after all interior finishing is done.

- F. Set the Window Pane into the cutout.

- G. Glue the Interior Frame into the cutout.

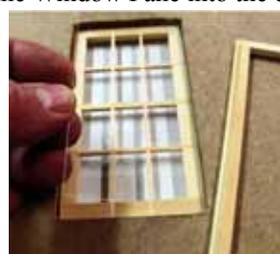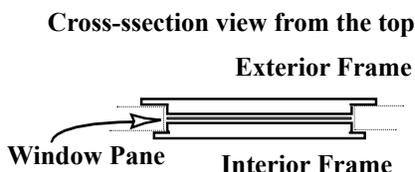

Glue the Interior Frame into the cutout.