

#JM 1605 Components for the Stockbridge: Door, Windows, Shutters

Door, Windows, and Shutters are an option for the JM1605, and are packed separately from the kit

JM 1605 Component set contains:

- 1 6028 Stockbridge Door: $9\frac{3}{16} \times 7\frac{3}{16}$ with side lights
- 9 5032 Colonial Window $5\frac{5}{16} \times 2\frac{15}{16}$ with interior trim
- 7pr. 5025 Louvered Shutter $4\frac{11}{16} \times 1\frac{1}{4}$
- 1 Cutout Base $\frac{1}{8} \times 1\frac{1}{4} \times 5\frac{3}{8}$

Paint the Windows, Door, and Shutters with high-quality interior semi-gloss latex paint. Sand thoroughly after the first coat, until the paint is soft feeling, transparent, and some of the wood is showing. The quality of the final product is dependent on the quality of the sanding after the first coat.




1. Disassemble the Door for painting:


- A. Pull the bottom pin. Tip the door out of the frame, bottom-first.
- B. Remove the top pin (tape the pins somewhere safe so they don't get lost... a cut-off piece of paper clip can substitute for a lost pin).
- C. Remove the Side-Lights - slide the Pane upward. Store the pane in a plastic bag until re-assembly. Put the SideLight-Top Frame back in place while painting, but remove it and clean it after each coat.



2. Paint or stain the door. Paint or stain the door frame. Paint or stain the SideLight Frames. Remove the Top Frame and clean the joint immediately after every coat. Mop out the groove with a piece of card-stock or light chipboard.

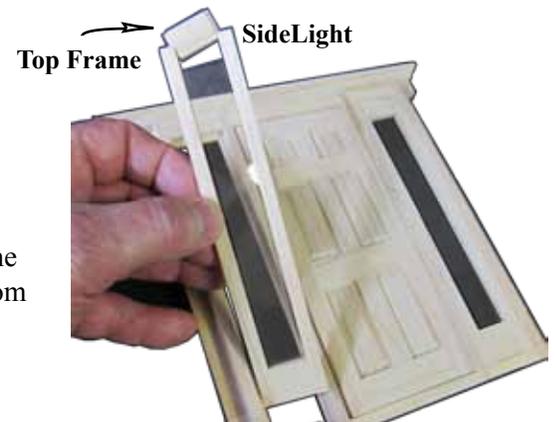


3. Reassemble the door when painting is complete. Put in the top pin, tip the door into position inserting the top pin in the hole in the top of the door, tip the door back into the frame, and feel with the bottom pin until you find the bottom hole. Tape the bottom pin to the bottom of the Door Frame to keep the pin from falling out.

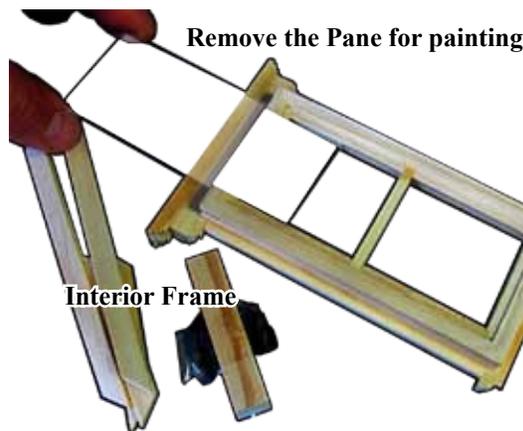


4. Painting Windows and Doors - slide out the pane. Make a card-stock copy of the pane to blot the groove after each coat of paint (don't leave the blotter in the groove while painting). Paint, sand, and paint again.

5. Glue the Cutout Base into the groove in the Top Step, lined up on top and centered under the door (inside the cutout). Paint along with the Steps.

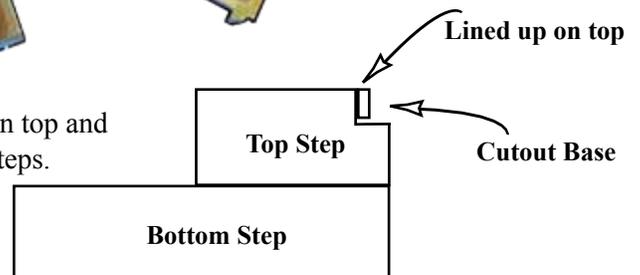

6A. Glue in the Windows, Shutters, and Door.
 Have a Shutter in place between paired Windows when
 you glue the Windows in. If the fit is tight, square the
 corners of the window cutouts more exactly.

B. Assemble the Interior Window and Door Frames,
 and glue them centered over the Windows and Door
 when other interior finishing is complete.

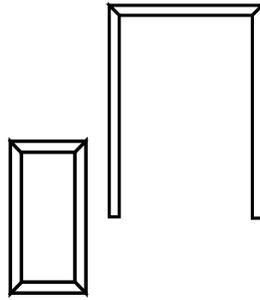

Paired Windows and Shutters

Accessories that fit the JM1605 (more at www.realgoodtoys.help)



P1600 Porch

I often enlarge an interior door opening
 to fit the #6022



Doors



E1615



E1625

Conservatory



E1640

Colonial Extensions



E1630



JM1600 with Extension and Conservatory from the back