


Ceiling Loop if you're wiring after construction.

Lay the Ceiling Loop lined up with the doors, from *close-to-the-floor* on one side to *close-to-the-floor* on the other side.

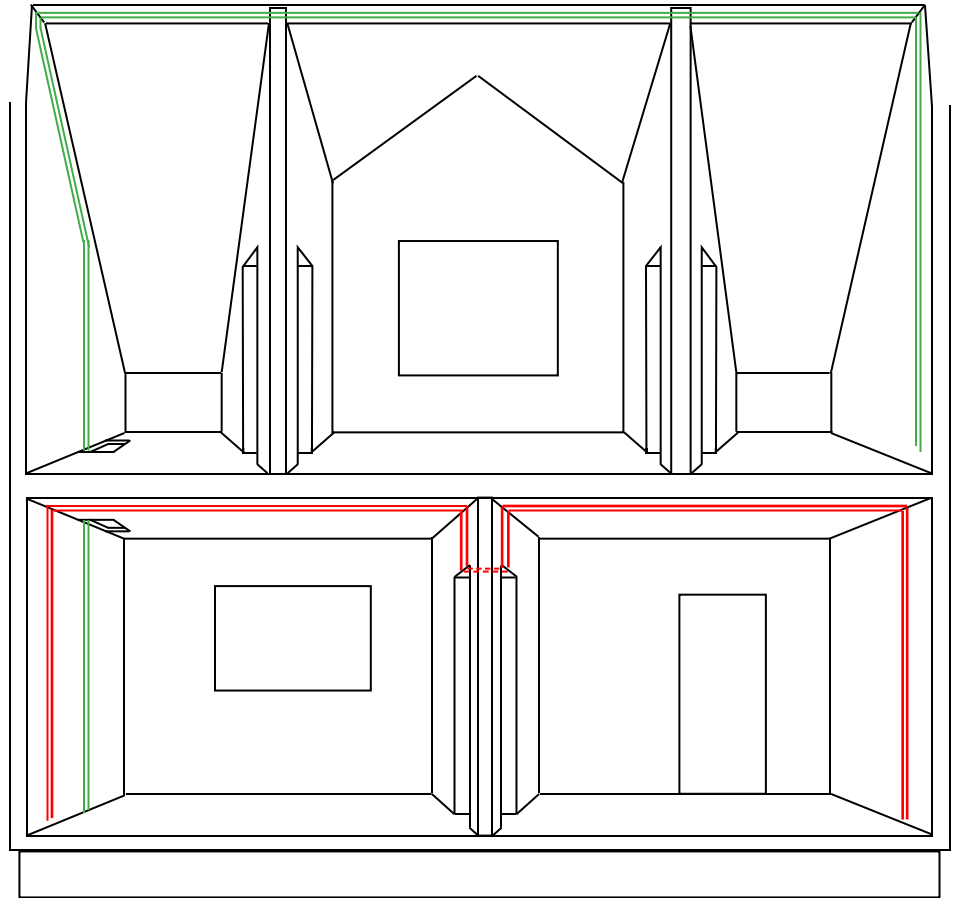

Ceiling Loop if you're wiring using E-Slots: lay the Ceiling Loop lined up with the Main Loop *copper-over-copper* and *blue-over-blue*, with at least 1 1/2" of overlap.

