


Adding the Attic Partitions later:
 Install the Attic Partitions and wire them 1/4" higher than the baserun on the Front Roof with 1 1/2" flaps on the Front Roof. Make sure the copper and blue wires match the copper and blue on the Front Roof run. The Attic Partition Baserun will turn down as it folds to the Front Roof and the extra 1/4" is necessary so the wire colors will line up for the eyelets in a place you can reach with your eyelet tool.



Eyelets must be installed where they can be centered on both wires.

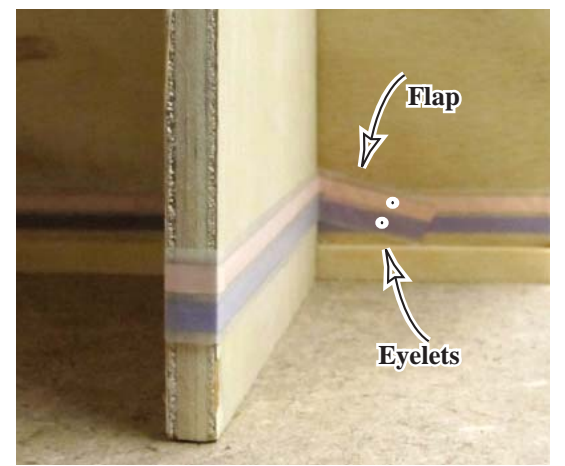

Flap and eyelets are on both sides of the Partition