

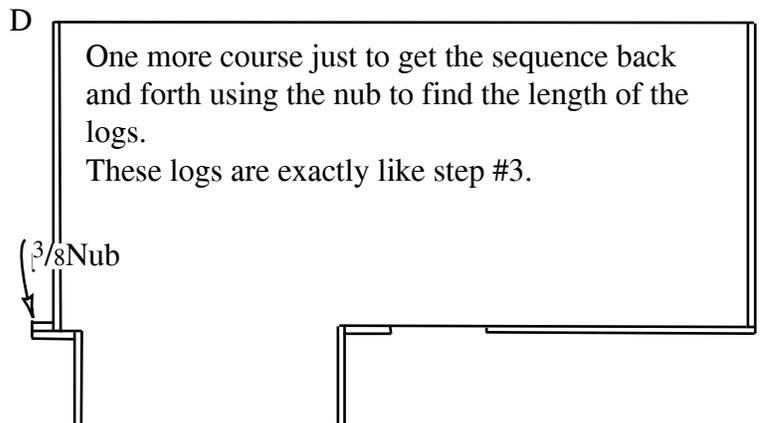
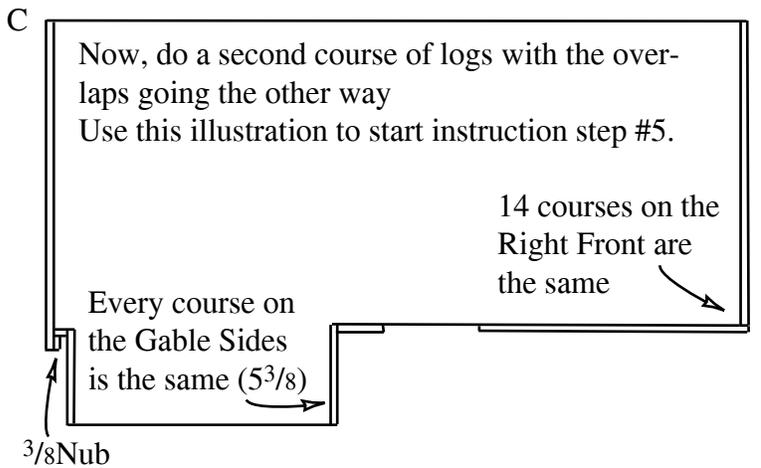
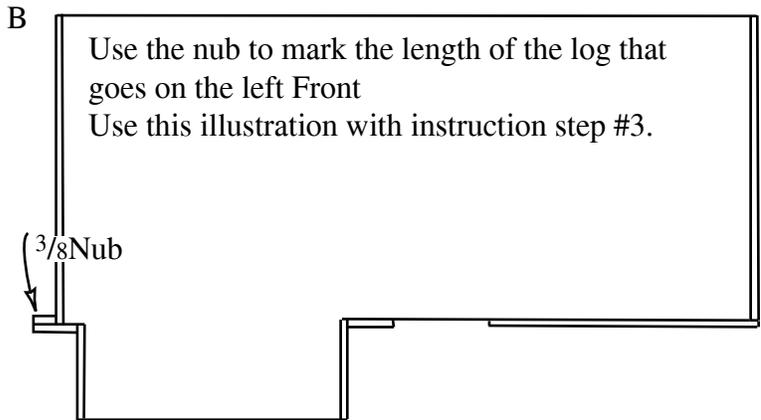


Use these steps for the first 3 courses of logs on the L-1781 Ponderosa; steps 1 - 5.

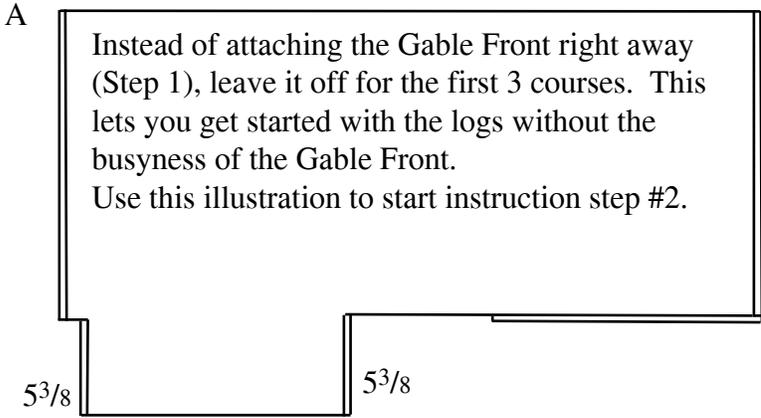


E. Gable Front, First course

Now we can tape on the Gable Front (step #1) and glue a 3/8" nub on each edge lined up with the 5 3/8 log on the Gable Side

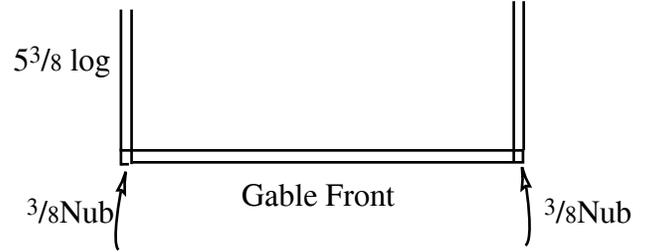


And a log on the front using 3/8 Nubs to find the length

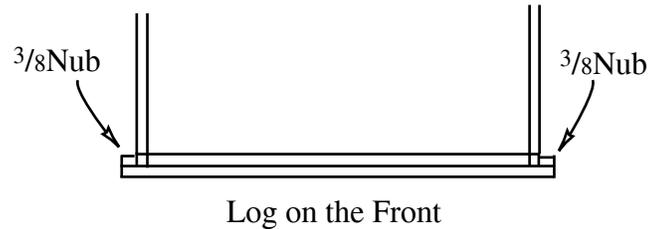


F. Gable Front, Second Course

The Second course on the Gable Front overlaps in the other direction

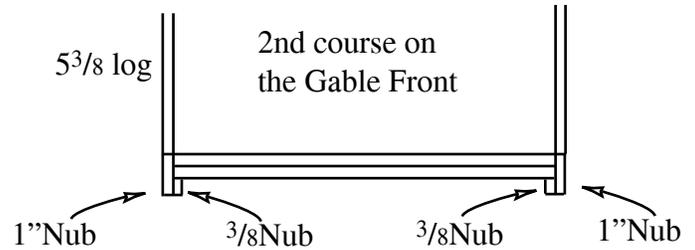

G. Gable Front, Third Course

The third course on the Gable Front is just like the first, but don't glue on the left 3/8 Nub yet... wait until the hinges have been attached (see where the hinge is in the photo on page 10)

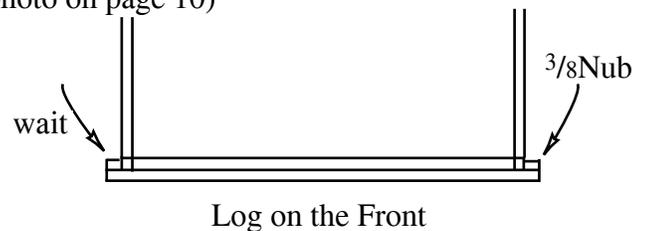

Now, jump to step #6